
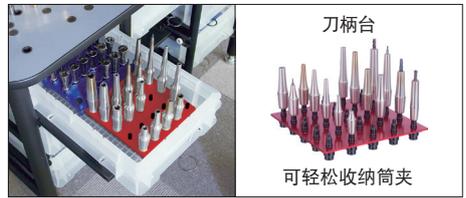
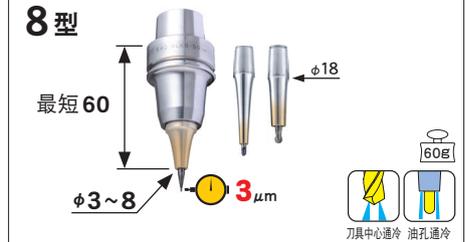
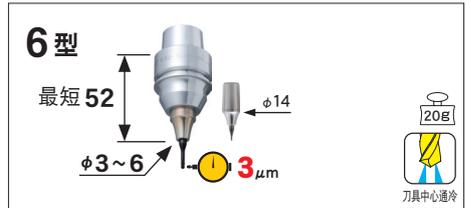


# 2 体型系列

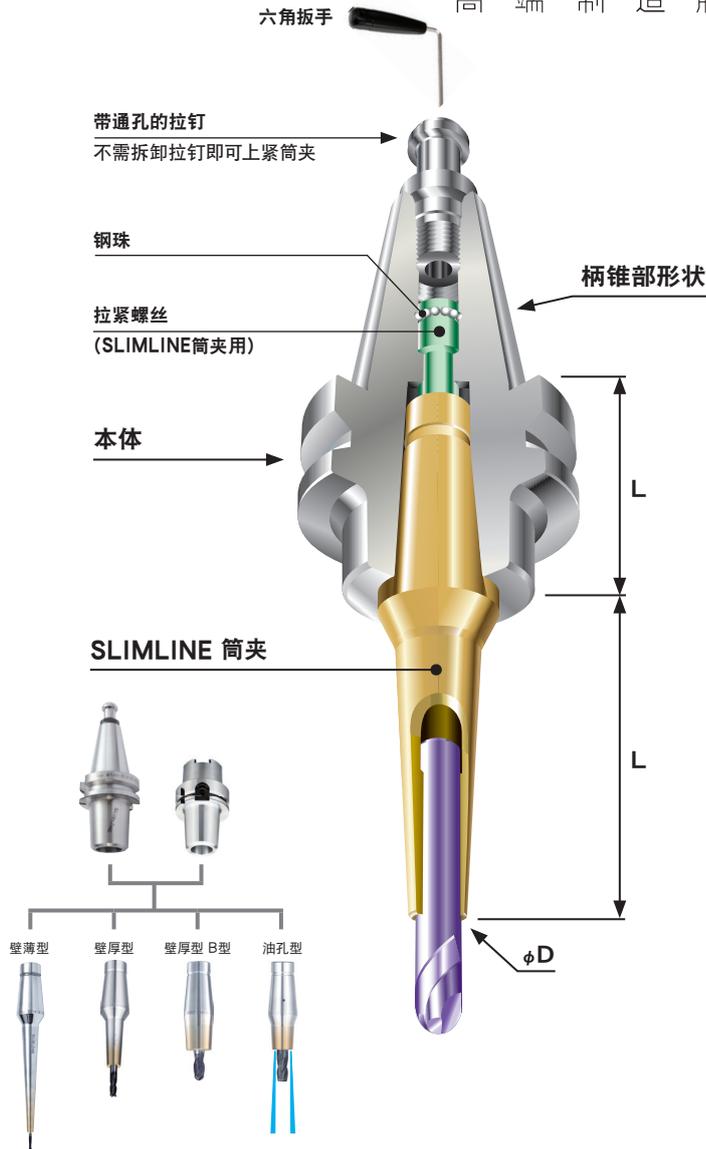

本体

**BT40 - SLK 12 - 45 F**


柄锥部形状 SLIMLINE 型 L 油孔通冷

SLIMLINE 筒夹

**CR 12 - 4 - 80**

筒夹式 φD L

PAGE	型	型
160	6 型	BT30 HSK-A40, A50 HSK-E32, E40, E50
161	8 型	BT30, BT40 HSK-A40, A50, A63 HSK-E40, E50, F63
162	12 型	BT30, BT40, BT50 HSK-A50, A63, A100 HSK-E50, F63 DN40, DN50

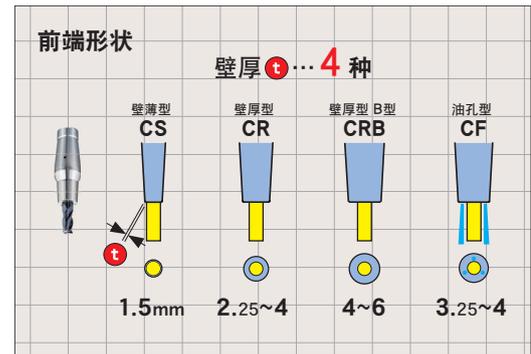

## ■ 本体 6型



Fig. 1


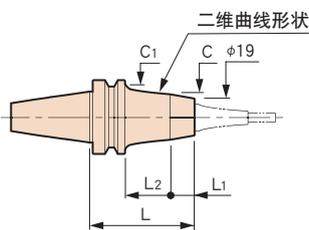


Fig. 2

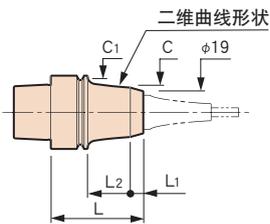

型号	Fig.	L	L1	L2	φC	φC1	Kg	N
<b>BT30-SLK 6-35-MAS1</b>	1	35	13	—	—	34	0.5	1.4
<b>-MAS2</b>		65	15	28	25.1	—	0.6	2.2
<b>-65-MAS1</b>								
<b>-MAS2</b>								
<b>A40 -SLK 6-37</b>	2	37	17	—	—	34	0.2	3
<b>50</b>		50	7	23	23.5	—	0.3	3.9
<b>A50 -SLK 6-42</b>	2	42	16	—	—	42	0.4	5.3
<b>55</b>		55	7	22	24.6	—	0.5	6.4
<b>E32 -SLK 6-37</b>	2	37	7	10	26	—	0.2	1.3
<b>-50</b>		50	—	23	—	—	—	2.2
<b>E40 -SLK 6-37</b>	2	37	17	—	—	34	0.3	1.7
<b>-50</b>		50	7	23	23.5	—	—	2.6
<b>E50 -SLK 6-42</b>	2	42	16	—	—	42	0.5	3.4
<b>-55</b>		55	7	22	24.6	—	0.6	4.4

### ■ 选购品

- SLIMLINE 筒夹6型
- 六角扳手

### ■ 标准附属品

- 冷却液导管 (HSK-A)
- 拉钉 (BT30)


### ■ 备考

- BT30锥柄专用拉钉。请确认机床品牌和型号。关于拉钉的交换请向弊司垂询。

### ■ 注意事项

- 如果无法将热装筒夹从本体上卸下时，请参照P.200页。
- HSK-E锥柄的刀柄没有附带冷却液导管。如需使用，请向弊司垂询。

## ■ SLIMLINE筒夹 6型

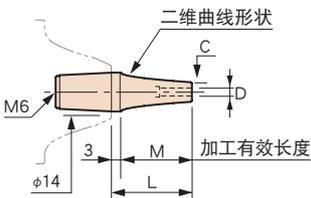


### ■ 备考

- $s$  是E32-SLK6-37与SLIMLINE热装式筒夹组合使用时的弯曲量。无论同哪种锥柄组合，其数值大致相同。

### ■ 注意事项

- 刀具安装…插入刀具时，请务必将刀具插入比安全记号更深的位置。


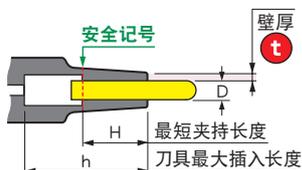


型号	φD	φC	t	L	M	H	S	N	g	h
<b>CS6-3-15</b>	3	6	1.5	15	12	9	1.5	0.1	20	24
				30	27	—	3.2	0.2	30	39
				45	42	—	9	0.3	40	54
<b>CR6-3-30</b>	3	7.5	2.25	30	27	9	1.3	0.1	30	39
				45	42	—	6.2	0.3	40	54
<b>CS6-4-15</b>	4	7	1.5	15	12	12	1.2	0.1	30	24
				30	27	—	2.8	0.2	—	39
				45	42	—	7.9	0.4	40	54
<b>CR6-4-30</b>	4	10	3	30	27	12	1	0.1	30	39
				45	42	—	4.4	0.5	50	54
<b>CS6-6-15</b>	6	9	1.5	15	12	15	1	0.1	20	24
				30	27	—	2.4	0.3	30	35
				45	42	—	6.5	0.5	40	—
<b>CR6-6-30</b>	6	12	3	30	27	15	0.8	0.2	20	35
				45	42	—	4	0.6	—	—

### ⚠ 在装夹刀具时，请勿超出刀具最大插入长 (h)

安装φ3、φ4的刀具时，如将刀具柄部插入长超过最大插入长度，刀具会接触碰撞上本体的拉紧螺丝，无法进行6型和8型两体式筒夹的正常安装。

由于6型和8型两体式筒夹的刀具插入长度较短，推荐使用热装用短柄刀具。若有切断刀具柄部时，请注意去除毛刺。

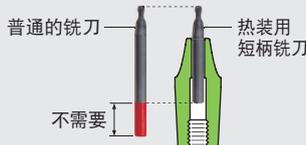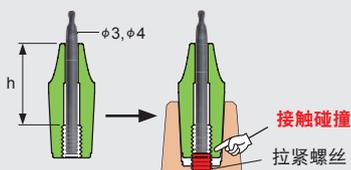

### ■ 六角扳手 (6型8型通用)

使用于SLIMLINE热装式6型·8型本体和筒夹的紧固。



型号	柄锥部形状
<b>TW-4</b>	HSK-A, E, F, BT40
<b>DW-14</b>	BT30

### ■ 主轴锥孔用 清洁工具

**STAR DUST**  
P.194



### ■ 刀柄台

P.14

